

General Information - Installation Checklist

Upon of the delivery please inspect for external visible damages. If package has suffered rough handling or damages please open the carton to inspect the item in the box as well. Please note to everything on the BoL before accepting the delivery.



Connection

- Open the back cover using the special key provided.
- Fill up manually the clean water tank.
- Place the bottle of soap in the correct position
- Connect the soap tube in the soap bottle
- Turn on the device by the ON/OFF switch
- Prime the soap by pressing No1 switch for 10 sec.
- Prime the rinse pump by pressing No2 switch for 10 sec
- Replace and lock the back cover

Use

To perform a hand washing cycle, follow the next steps:

1. Pass your hand above the sensor
2. Put you hands below the tap
3. Wet your hands for 3 seconds
4. Wait the soap to drop for 2 seconds
5. Scrub your hands for 15 seconds
6. Rinse your hands for 10 seconds

Maintenance

Periodically or when “alarm” LED light indicator flashes you have to check:

1. Clean water’s level inside the clean water tank
2. Waste - water level inside the waste- water tank

When both are in the right level “ready” LED light will flash

Periodically check the level of soap in the bottle as well.



BE CAREFUL WHEN LIFTING OR MOVING THE DISHWASHER TO AVOID LEAKS OR DAMAGES.



DO NOT MOVE / RELOCATE THE HAND WASHING SINK WITH THE WASTE AND CLEAN WATER TANK FULL OF WATER. IN CASE OF RELOCAION IS NECESSARY YOU HAVE FIRST TO EMPTY BOTH WASTE AND CLEAN WATER TANK.

